

MEMO_MINUTES

Paderborn, 18/03/2009

Contact: rene.berhorst@malighting.com

Pocket PC Wireless Remote

grandMA supports the use of pocket PCs as full featured designers remote control. These remote controls are linked to the master console or one of the other clients in a multi-user environment. Each client supports up to six individual remotes simultaneously. The grandMA remote software even runs with the offline-editor – ideal for demonstration purposes.

The software for the pocket PC is distributed together with the new grandMA release at no additional cost and not linked to any Streaming version.

Supported OS:

- MS Pocket PC
- MS Pocket PC 2002
- MS Windows Mobile 2003
- MS Windows Mobile 2003 SE
- MS Windows Mobile 2005

Pocket PC (some tested models):

For using the grand MA Remote Control Software you should have the following hardware equipment available:

- Compaq iPAQ Series 36xx with PCMCIA Extension Pack and Wireless LAN Card
- Compaq iPAQ Series 38xx with PCMCIA Extension Pack and Wireless LAN Card
- Toshiba e740/750 version WiFi (with built-in Wireless LAN Card)
- Toshiba e800 Version Wifi
- Fujitsu Siemens Pocket Loox Modell 710
- Fujitsu Siemens Pocket Loox Modell N520
- Fujitsu Siemens Pocket Loox Modell N560

To improve the performance of the connection between the PDA and the grandMA console it is recommended to disable the WLAN power save mode on your PDA, if available.

Wireless LAN Access Point:

Basically any WLAN access point with IP addresses to set and a small necessary configuration of the allowed traffic to set, e.g.:

- Lancom 54g
- Asus SpaceLink WL-300
- LinkSys DI-614+
- 3Com WLAN Access Point 2000
- D-Link DWL-900APP+ Wireless Access Point
- D-Link DI-614+
- E-Pox EWL-A11 Access Point

PPC Emulator (Win2000/WinXP/Vista) – Wireless Remote:

Download the ZIP-archive ppcemusetup.exe

In grandMA Remote we've implemented the shortcuts known from the onPC software.

This is useful for PDA's which have an alphanumeric hardware keypad.

You can switch the shortcut mode on/off if you press the wrench-icon in the right corner of the toolbar (left to the keyboard-icon).

If the background of the wrench-icon is white the shortcuts are active.

Active shortcuts are in conflict with the cursor hardware button for changing pan/tilt values.

So you have to switch off the shortcut mode (the background of the wrench-icon is grey) to change pan/tilt values in the familiar way.

In grandMA Remote the possibility of switching into shortcut mode is depending on a setting in the options dialog.

So there won't be any unintentional side effects if you don't want to use the shortcut feature anyway.